



THESE ARE DRAWER FRONTS AND EXACT DIMENSIONS SHOULD BE TAKEN OFF ASSEMBLED CABINETS

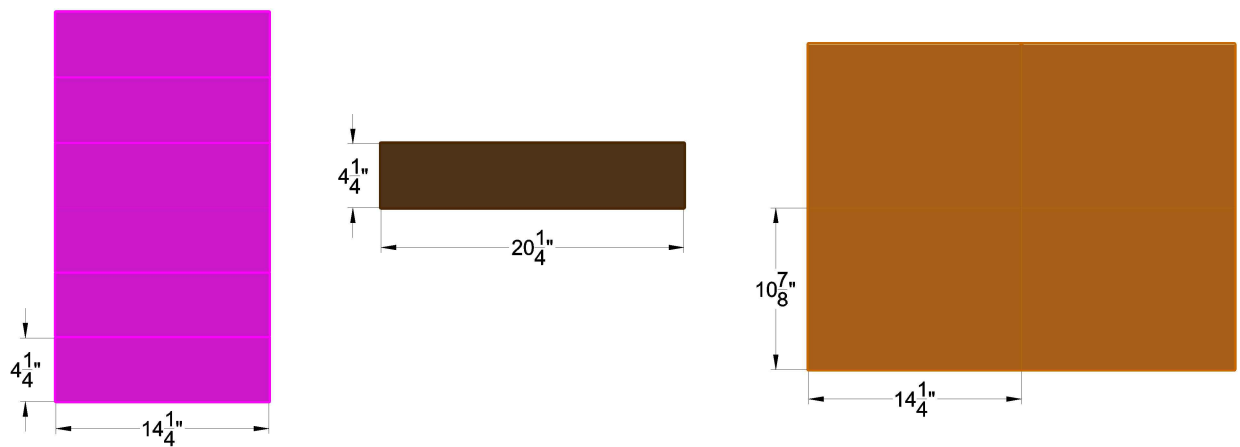

THESE ARE DRAWER FRONTS AND EXACT DIMENSIONS SHOULD BE TAKEN OFF ASSEMBLED CABINETS

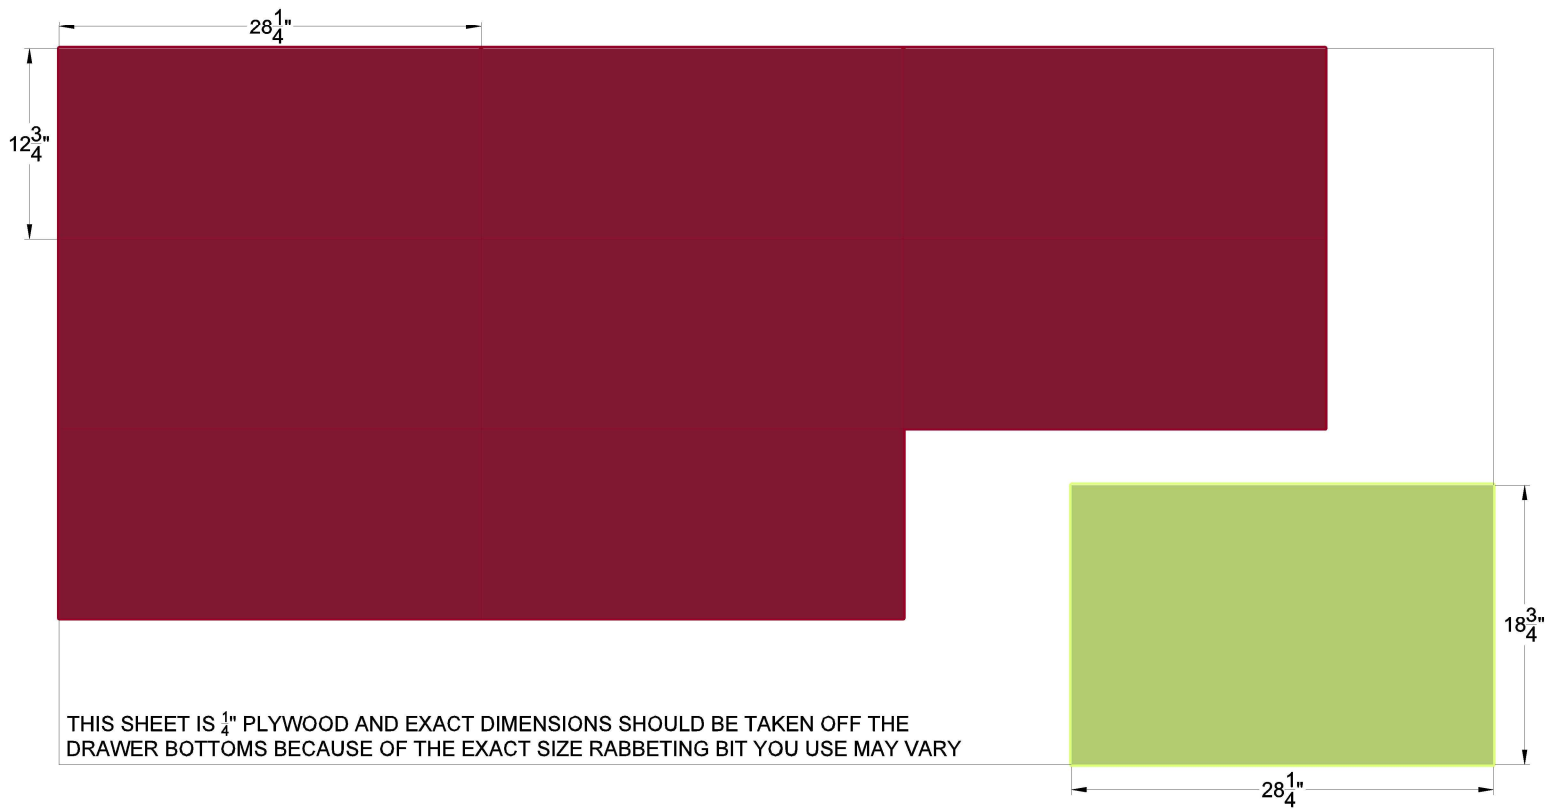